


地区8 地震摇晃容易度地图



凡 例	
测量烈度	烈度
6.50~	烈度7
6.25~6.49	烈度6强
6.00~6.24	
5.75~5.99	烈度6弱
5.50~5.74	

测量烈度和烈度的说明，请参阅第3页。

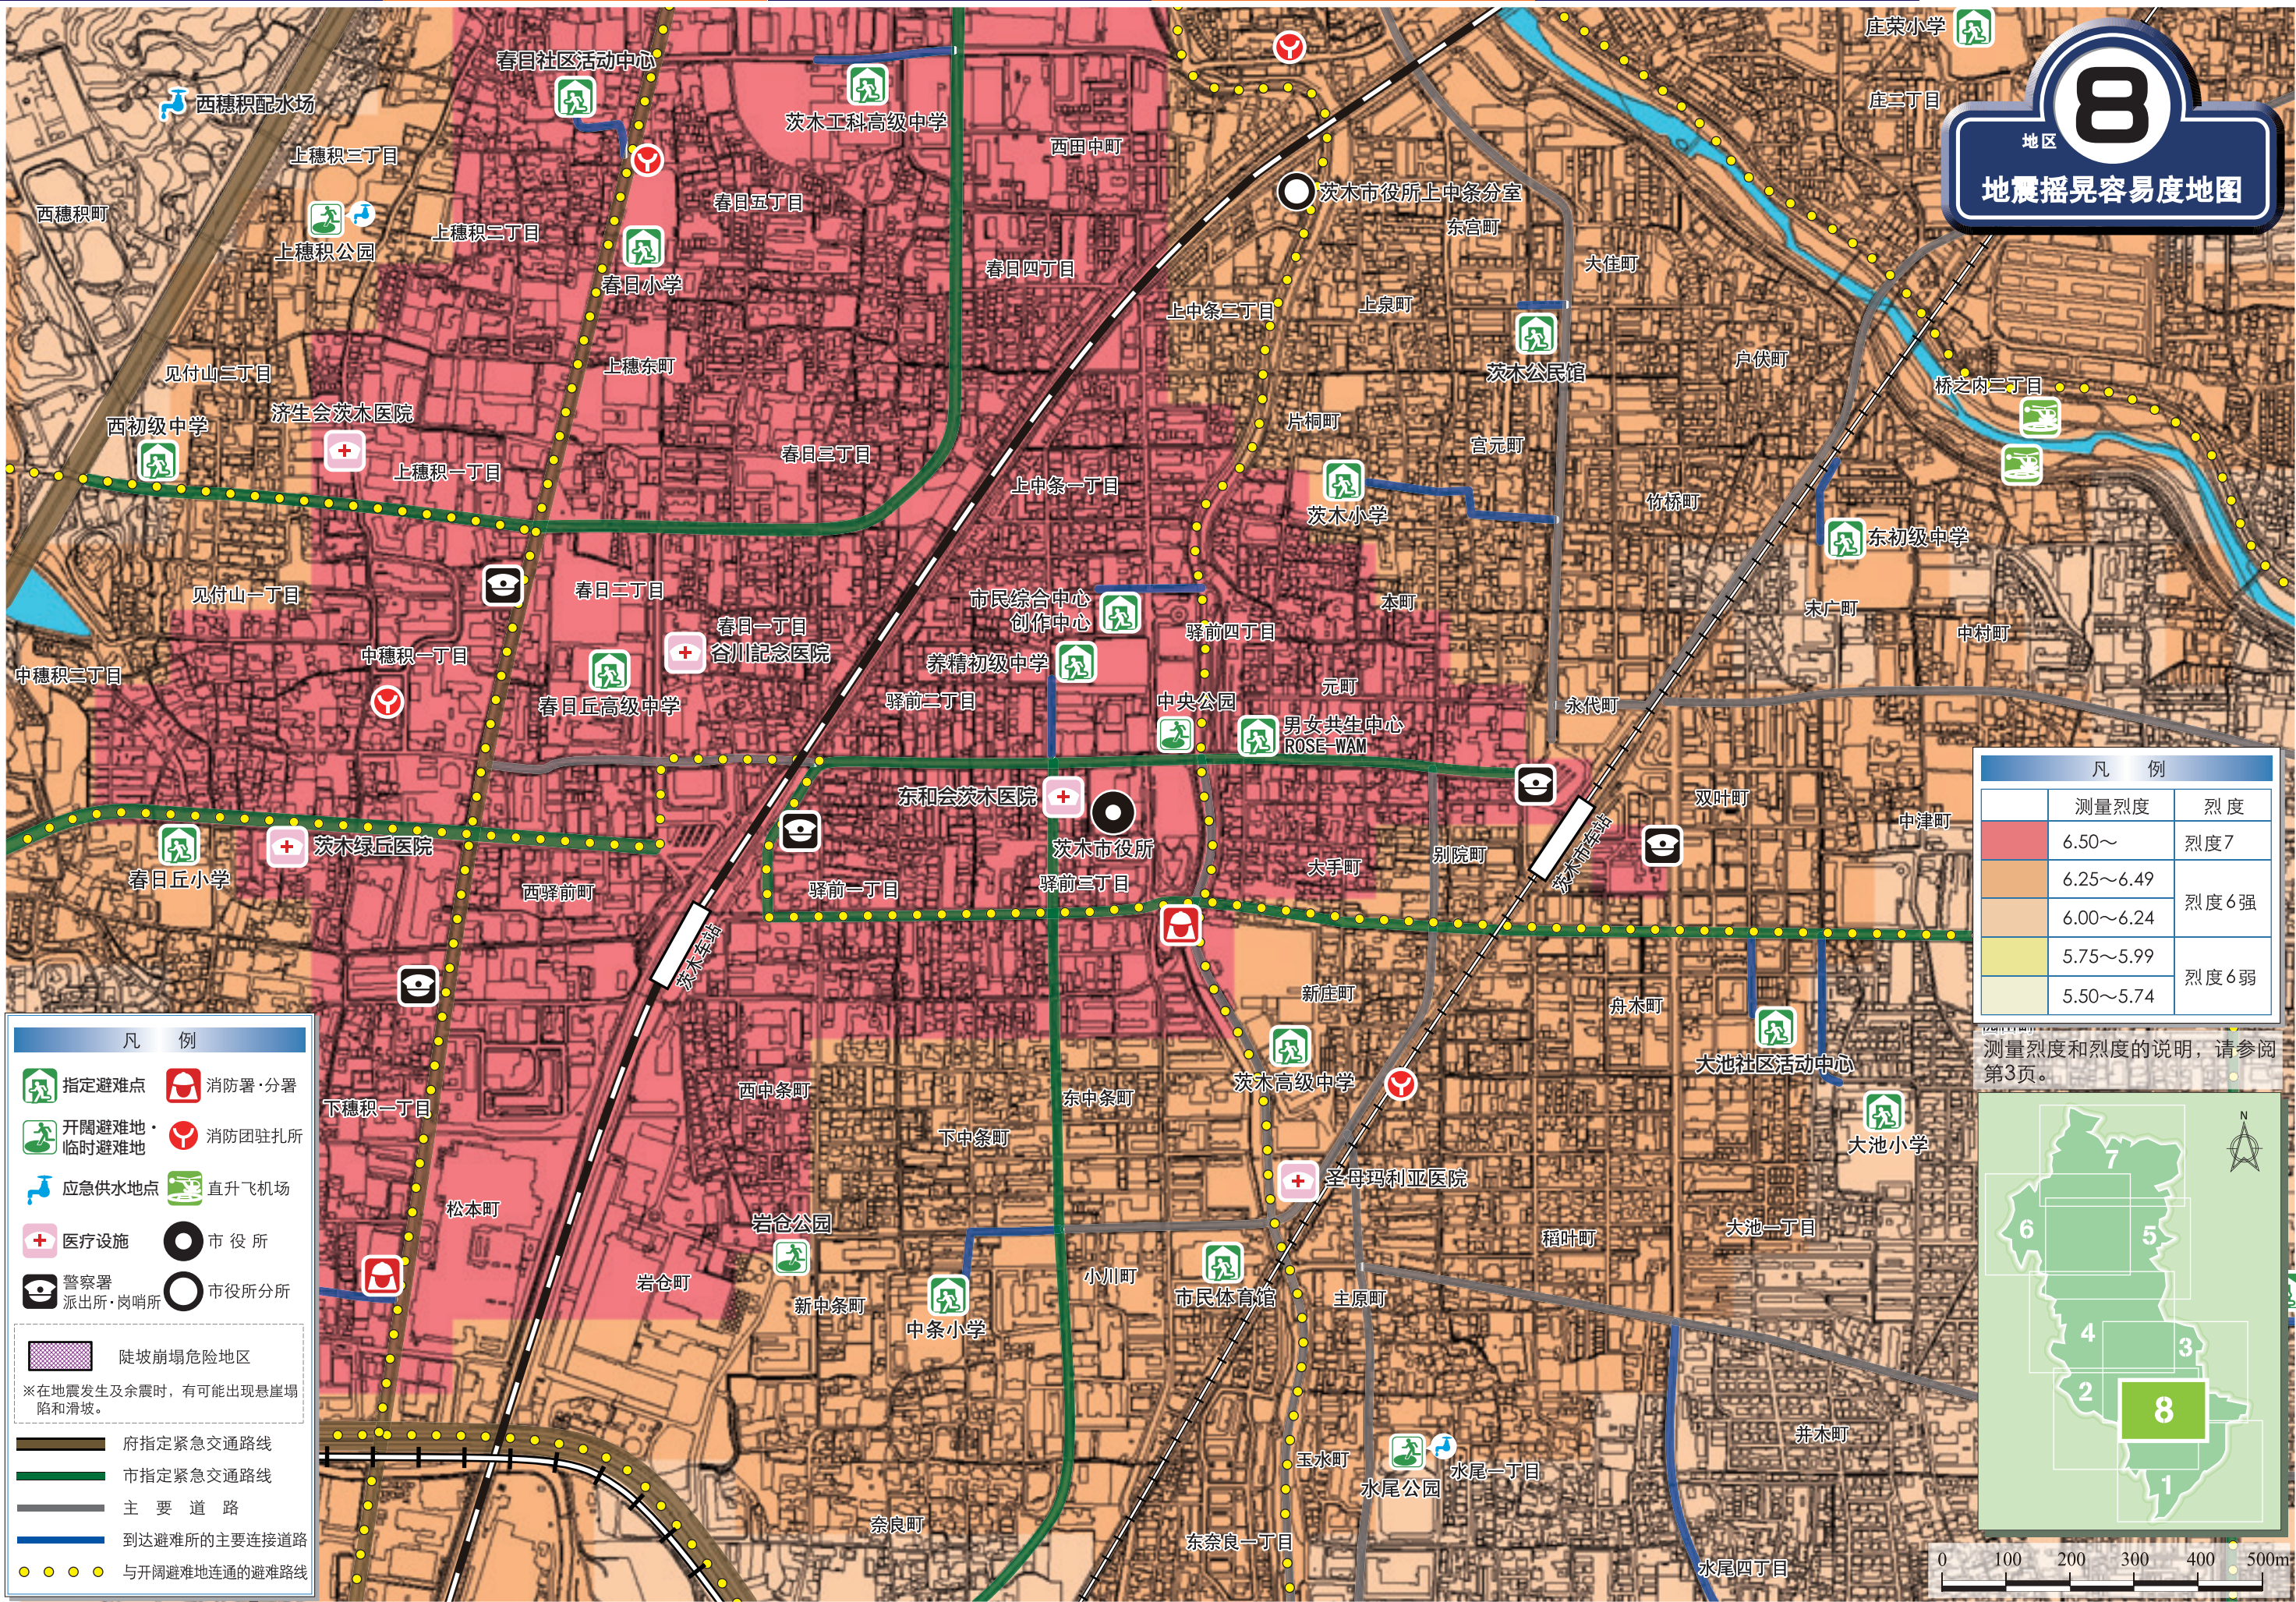